

R&S® ZVH

Cable and Antenna Analyzer

For more efficiency
in the field



R&S®ZVH

Cable and Antenna Analyzer

At a glance

The R&S®ZVH is a rugged, handy cable and antenna analyzer, designed for use in the field. Its low weight and simple operation make it indispensable for anyone who needs an efficient measuring instrument outdoors for the installation and maintenance of antenna systems.

When it comes to the installation or maintenance of antenna systems for mobile radio, broadcasting or radiocommunications, the R&S®ZVH cable and antenna analyzer performs fast, reliable and highly accurate measurements. Even in its basic configuration, the R&S®ZVH detects cable faults, measures the matching of filters and amplifiers and checks the loss of cable connections – the three most important tasks involved in setting up transmitter systems and putting them into operation. For further measurements such as the isolation between transmit and receive antennas or the output power of output amplifiers, suitable options are available to the RF service engineer or maintenance team.

Weighing only 3 kg, the R&S®ZVH is a handy instrument. Frequently used functions have their own function keys and are within fingertip reach. The built-in wizard lets users perform even extended test sequences fast and flawlessly. Using the R&S®ZVHView software, test reports can be generated in just a few simple operating steps.

The brilliant color display is easy to read even under poor lighting conditions, and it has a monochrome mode for extreme conditions. The capacity of the R&S®ZVH battery enables uninterrupted operation for up to 4.5 hours. The battery is changed within seconds. And if it rains? No problem – all connectors are splash-proof.

Key facts

- Frequency range from 100 kHz to 3.6 GHz or 8 GHz
- 100 dB (typ.) dynamic range for filter and antenna isolation measurements
- Factory calibration over entire frequency range
- Built-in DC voltage supply (bias) for active components such as amplifiers
- Power meter option
- Saving of measurement results on SD memory card or USB memory stick
- Easy operation with user-configurable test sequences (wizard)
- Easy-to-replace Lithium-ion battery for up to 4.5 h of operation
- Rugged, splash-proof housing for rough work in the field
- Easy handling due to low weight (3 kg with battery) and easy-to-reach function keys



Distance-to-fault measurement at a mobile radio antenna system with the R&S®ZVH.

R&S®ZVH

Cable and Antenna Analyzer

Benefits and key features

Installation of antenna systems

- ▮ Distance-to-fault measurements (DTF)
- ▮ One-port cable loss measurements
- ▮ Reflection measurement
- ▮ Transmission measurements
- ▮ Built-in DC voltage supply
- ▮ Position finding using GPS receiver
- ▮ Factory calibration of the R&S®ZVH

▷ [page 4](#)

Maintenance of antenna systems

- ▮ Two-port vector network analysis
- ▮ Vector voltmeter
- ▮ Terminating and directional power measurements
- ▮ Pulse analysis with wideband power sensors
- ▮ Internal channel power meter
- ▮ Spectrum analysis measurements
- ▮ Spectrogram measurements

▷ [page 6](#)

Easy operation


- ▮ Test report in just a few steps using the R&S®ZVH wizard
- ▮ Channel tables for frequency setting
- ▮ Optimal reading of measurement results in any situation
- ▮ Operation in different languages
- ▮ Easy-to-access, well-protected connectors

▷ [page 8](#)

Documentation and remote control

- ▮ R&S®ZVHView software for documenting measurement results
- ▮ Remote control via LAN or USB

▷ [page 12](#)

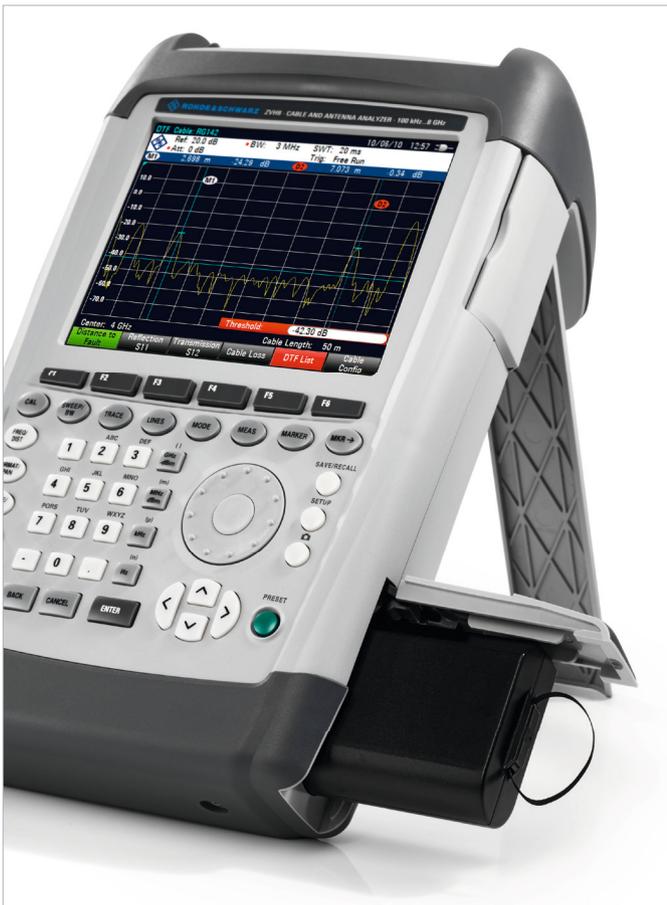

Easy-to-replace Lithium-ion battery for up to 4.5 h of operation.

Built-in DC voltage supply

The built-in DC bias supplies power to active DUTs such as amplifiers at both test ports via the RF cable. This function is especially useful for tower-mounted amplifiers (TMA). The voltage of the internal DC source can be set in steps as small as 1 V in the range from 12 V to 32 V. The maximum current is 500 mA. If the power delivered by the internal source is not sufficient, an external voltage source of max. 50 V and 600 mA can be connected to supply active components, usually amplifiers.

One-port cable loss measurement.



Position finding using GPS receiver

By using the R&S®HA-Z240 GPS receiver, the R&S®ZVH documents where a measurement is carried out. The display indicates the longitude, latitude and altitude of the site. If required, the position can be stored together with the measurement results for documentation purposes.

Factory calibration of the R&S®ZVH

The R&S®ZVH is delivered factory-calibrated and ready to measure. There is no need to calibrate before making measurements such as return loss, VSWR, DTF and one-port cable loss in a base station cable and antenna system.

Reflection measurement.




When using an RF jumper cable or an adapter to connect the R&S®ZVH to the DUT, the easy one-port normalization technique compensates the introduced attenuation. The easy one-port normalization is applied on top of the factory calibration and does not require a calibration standard.

TMA transmission measurement: built-in voltage supply, current measurement, R&S®HA-Z240 GPS receiver connected.




Maintenance of antenna systems

Vector network analysis: measurement with Smith chart.

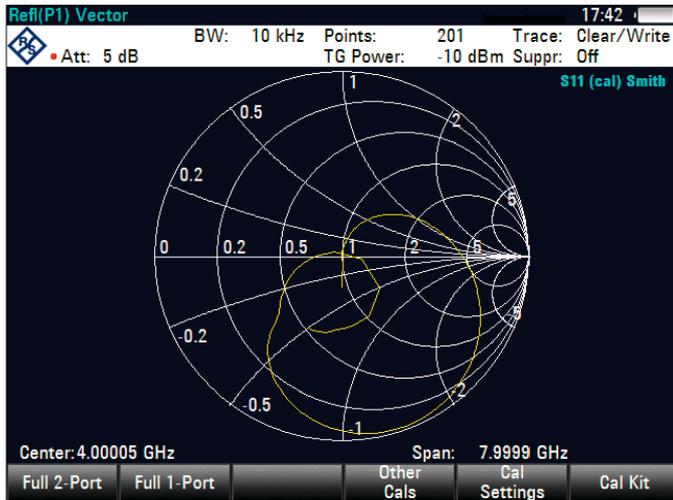

Vector voltmeter display.

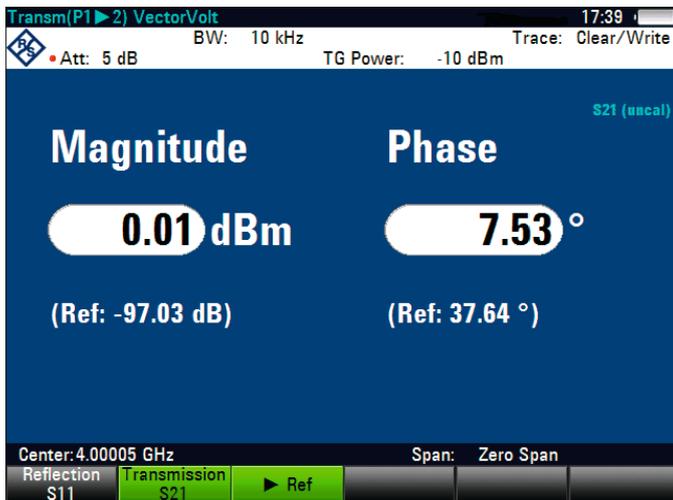

Pulse analysis with R&S®ZVH-K29 and R&S®NRP-Z81 wideband power sensors.



By adding options, the R&S®ZVH is ready to handle additional requirements such as two-port vector network analysis, vector voltmeter, power measurements or spectrum analysis. Other functions can be easily added through software enabling or accessories – with no need for servicing.

Two-port vector network analysis

The R&S®ZVH-K42 option transforms the R&S®ZVH into a two-port vector network analyzer. Matching and transmission characteristics of filters, amplifiers, etc., can be determined quickly and with high accuracy in the forward and reverse direction with only one test setup.

- ▮ Increased measurement accuracy due to vector system error correction
- ▮ Measurement of magnitude and phase of S-parameters S_{11} , S_{21} , S_{12} and S_{22}
- ▮ Simultaneous display of magnitude and phase in split-screen mode
- ▮ Simultaneous display of four different S-parameters
- ▮ Smith chart with zoom function
- ▮ Support of all conventional marker formats
- ▮ Input of a reference impedance for DUTs with an impedance other than 50 Ω
- ▮ Electrical length measurement
- ▮ Determination of group delay

Vector voltmeter


The R&S®ZVH-K45 vector voltmeter option displays the magnitude and phase of a DUT on a fixed frequency. Therefore, the R&S®ZVH can replace a conventional vector voltmeter for many applications. The required signal source and bridge are already available in the R&S®ZVH. Costs are saved and the test setup is significantly simplified, making the R&S®ZVH-K45 ideal for field use. For relative measurements, the measurement results of a reference DUT are stored at the press of a button. Comparison measurements, e.g. between different RF cables and a reference cable (golden device), can be quickly and easily performed. Typical applications are as follows:

- ▮ Adjustment of electrical cable length
- ▮ Checking of phase-controlled antennas as used, for example, in air traffic control with an instrument landing system (ILS)


Terminating and directional power measurements

When equipped with R&S®NRP-Zxx or R&S®FSH-Zxx terminating power sensors and the R&S®ZVH-K9 option, the R&S®ZVH becomes an accurate RF power meter with a measurement range from -67 dBm to +45 dBm. Which-ever sensor is used, the true RMS value of the measured signal is obtained over the whole measurement range regardless of the signal waveform. The R&S®ZVH-K9 option in combination with the R&S®FSH-Z14 and R&S®FSH-Z44 directional power sensors transforms the R&S®ZVH into a full-featured directional power meter for the frequency ranges from 25 MHz to 1 GHz and from 200 MHz to 4 GHz.


Measurement of the forward (TX output) and the reflected power of an antenna.

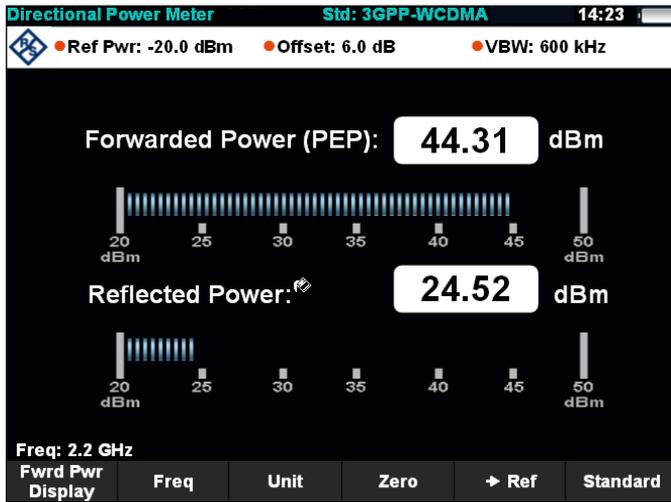

ACLR measurement on a 3GPP WCDMA signal with four carriers.

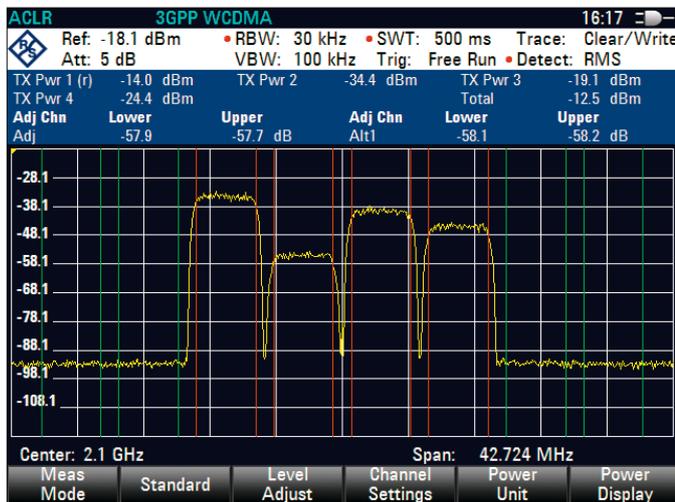

Simultaneous display of spectrum and spectrogram.

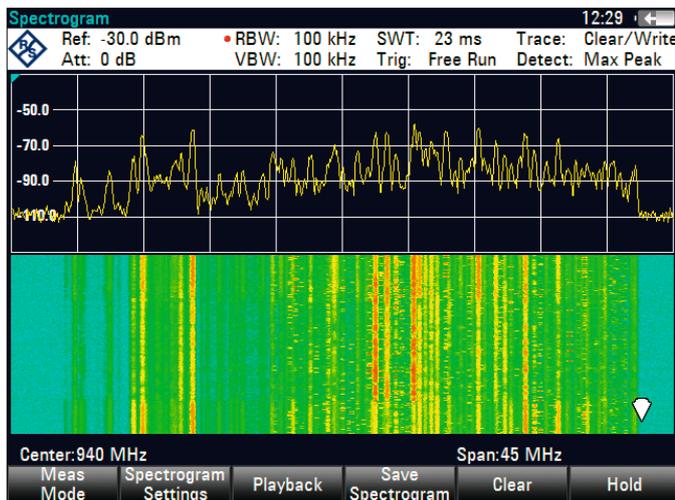

The R&S®ZVH can then simultaneously measure the output power and the matching of transmitter systems antennas under operating conditions. The power sensors measure average power up to 120 W and eliminate the need for extra attenuators. In addition, the peak envelope power (PEP) up to max. 300 W can be determined.

Pulse analysis with wideband power sensors

When equipped with the R&S®ZVH-K29 option and a R&S®NRP-Z81/-Z85/-Z86 wideband power sensor, the R&S®ZVH can measure peak power and the main pulse parameters up to 44 GHz.

Internal channel power meter

The R&S®ZVH-K19 option enables the R&S®ZVH to measure channel power without an external power sensor with the same accuracy as the R&S®ZVH-K1 spectrum analysis option. The measurement amplitude range goes up to +30 dBm. The frequency range covers the full R&S®ZVH frequency span. The channel bandwidth can be set up to 1 GHz and allows measuring all types of signals, including modulated ones such as LTE, WCDMA, etc .

Spectrum analysis measurements

The R&S®ZVH-K1 option equips the R&S®ZVH for spectrum analysis and offers the following measurement functions:

- ▮ Channel power
- ▮ Occupied bandwidth
- ▮ Power on pulsed TDMA signals
- ▮ Adjacent channel power (ACLR)
- ▮ Spurious emissions (spectrum emission mask)
- ▮ Measurements of the modulation spectrum on pulsed signals with gated sweep
- ▮ Field strength with directional or isotropic antenna
- ▮ Measurements of signal distortions caused by harmonics
- ▮ AM modulation depth measurements
- ▮ Frequency counter
- ▮ Noise marker
- ▮ AM/FM audio frequency demodulator

Spectrogram measurements


Equipped with the R&S®ZVH-K14 spectrogram measurement application, the R&S®ZVH can provide a history of the spectrum. This application can be used to analyze intermittent faults or time-dependent frequency and level variations. Specific analyses can be made by replaying recorded data and setting time lines and markers.

CDMA2000® is a registered trademark of the Telecommunications Industry Association (TIA - USA).


Easy operation

The built-in wizard lets users run even complex test sequences for the installation and maintenance of antenna systems easily and quickly. All frequently used functions such as calibration, frequency, marker and measurement functions are directly accessible via keys.

All basic settings can be conveniently made in a straightforward list. Measurement results including instrument settings are saved to the internal memory or the replaceable SD memory card or the USB memory stick. Pre-defined instrument settings can be locked to prevent them from being changed unintentionally. This reduces the risk of incorrect measurements.

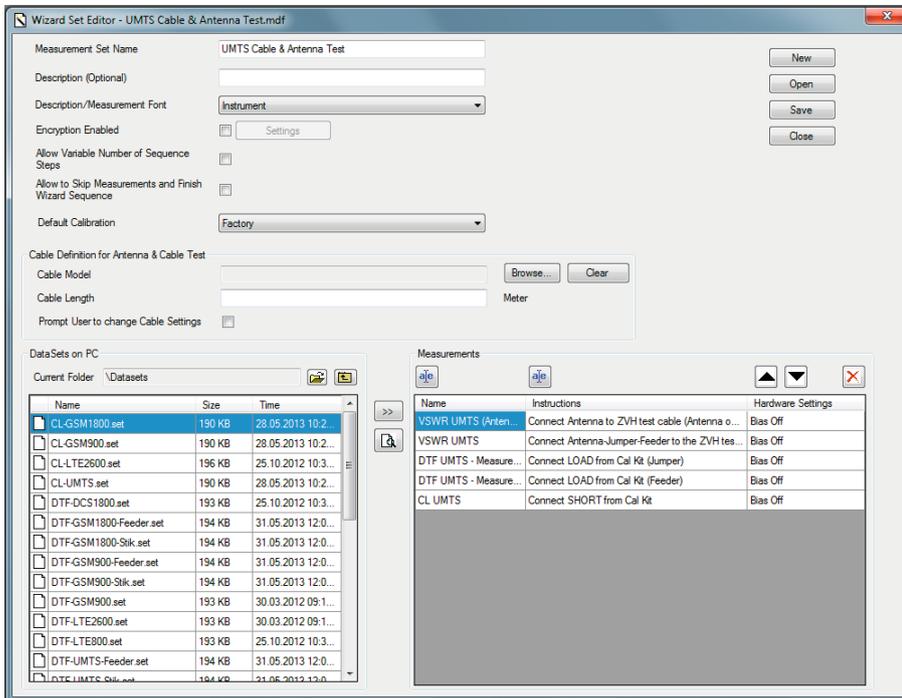

Using the wizard definition editor in R&S®ZVHView, predefined instrument settings can be combined into test sequences on a PC and then transferred to the R&S®ZVH.

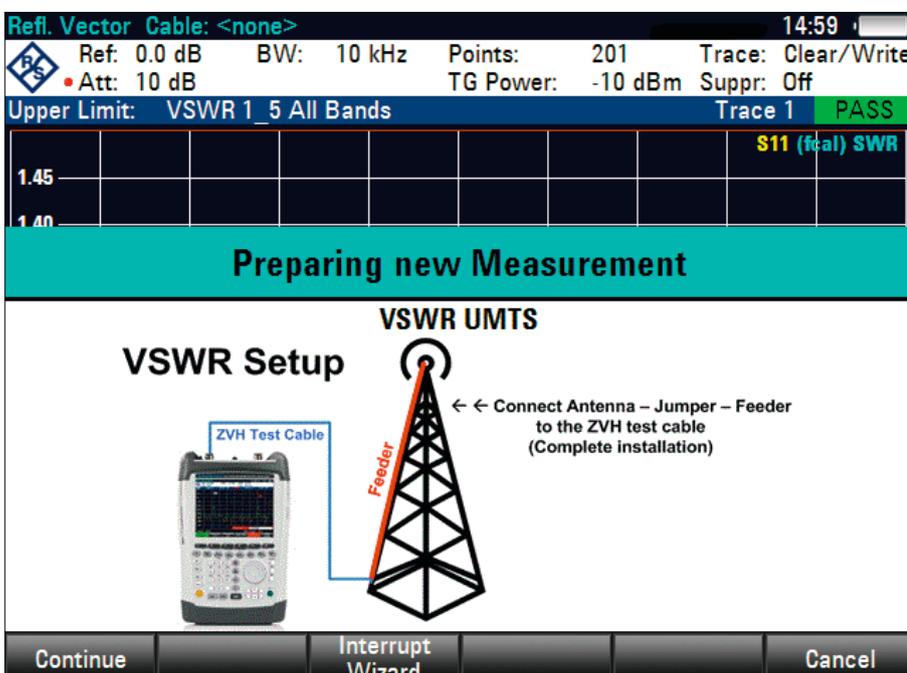

Each individual measurement in a test sequence can be assigned comments and pictures providing helpful information to the user.

User-defined test sequences can be selected and started using the WIZARD key. For documentation purposes, the contents of a screenshot can be saved as a graphics file – with a single keystroke.

Test report in just a few steps using the R&S®ZVH wizard

When an antenna is being installed, the customer usually requests a test report. The required measurements are defined in test instructions. The R&S®ZVH wizard makes this procedure easy for the user and eliminates the need to consult the installation instructions. Configuring the R&S®ZVH wizard is very simple:

First, the user makes the instrument settings on the R&S®ZVH for each of the individual measurements as described in the test instructions, saves them and transfers them to a PC. Next, using the wizard definition editor on the PC, the user combines the settings of all individual measurements into a single test sequence. Here, the user can assign each measurement comments and pictures with instructions for the field engineer. These instructions will then be displayed on the R&S®ZVH at the beginning of the measurement. Last, the user transfers the data set


containing the complete test sequence to the R&S®ZVH. After the test sequence is started on the instrument, the dialog-based wizard guides the user through the measurements and automatically saves the results.

Consequently, for the user on site, it takes only four steps to generate a test report:

- 1st step: Select the test sequence via the WIZARD key
- 2nd step: Perform the specified measurements
- 3rd step: Save the results on the R&S®ZVH
- 4th step: Transfer the measurement results to the PC and generate a test report

The advantages for the user:

- Easy creation of test sequences using the wizard
- Incorrect measurements are avoided thanks to predefined test sequences and on-screen instructions
- Reproducible measurement results
- Time is saved by speeding up the installation process
- All members of an installation team use the same test sequence
- Uniform test report format

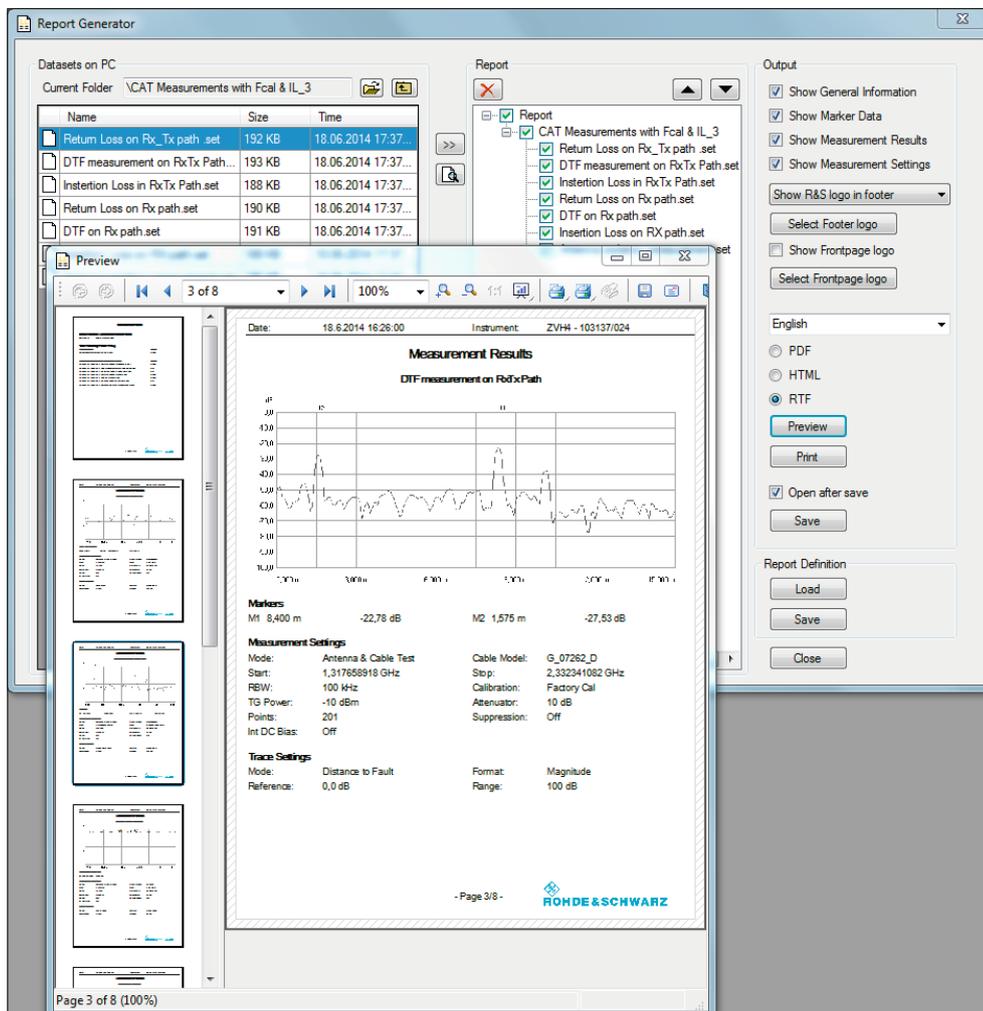

With just a few mouse clicks, the individual results of a test sequence are combined into a conclusive test report.

Channel tables for frequency setting

As an alternative to entering a frequency, the R&S®ZVH can be tuned using channel numbers. Both channel number and the center frequency are displayed. Users who are familiar with the channel assignments commonly used in mobile radio or TV/broadcast applications can operate the R&S®ZVH even more easily. For a large number of countries, channel tables for the GSM, 3GPP WCDMA, TD-SCDMA, CDMA2000® and LTE mobile radio standards as well as TV channel tables are supplied with the R&S®ZVH.

Optimal reading of measurement results in any situation

The measurement results on the bright, straightforward 6.5" VGA color display are very easy to read. The back-lighting of the display can be adjusted to the ambient lighting conditions. For use in extremely strong sunlight, a special monochrome mode provides optimal contrast.

Operation in different languages

The R&S®ZVH user interface is available in various languages. Almost all of the softkeys, operating instructions and messages will then be displayed in the selected language. The R&S®ZVH supports the following languages: English, German, Korean, Japanese, Chinese, Russian, Italian, Spanish, Portuguese, French and Hungarian.

Easy-to-access, well-protected connectors

Additional inputs/outputs such as the DC voltage supply (bias), interfaces and the SD memory card are easily accessible under dust-proof hinged covers on the side of the instrument.


Selecting the channel table.

Stat	Name	Size	Date	Time
	cdma2k_7 (Upper 700 MHz Band).chntab	1 kB	23/07/2010	03:57
	cdma2k_8 (1800 MHz Band).chntab	1 kB	23/07/2010	03:57
	cdma2k_9 (900 MHz Band).chntab	1 kB	23/07/2010	03:57
	GSM-E-EDGE 900.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 1800.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 1900.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 450.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 480.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 750.chntab	1 kB	23/07/2010	03:57
	GSM-EDGE 850.chntab	1 kB	23/07/2010	03:57
	GSM-P-EDGE 900.chntab	1 kB	23/07/2010	03:57
	GSM-R-EDGE 900.chntab	1 kB	23/07/2010	03:57
	LTE (Band 1).chntab	1 kB	23/07/2010	03:57
	LTE (Band 10).chntab	1 kB	23/07/2010	03:57
	LTE (Band 11).chntab	1 kB	23/07/2010	03:57
	LTE (Band 12).chntab	1 kB	23/07/2010	03:57
	LTE (Band 13).chntab	1 kB	23/07/2010	03:57
	LTE (Band 14).chntab	1 kB	23/07/2010	03:57
	LTE (Band 17).chntab	1 kB	23/07/2010	03:57
	LTE (Band 2).chntab	1 kB	23/07/2010	03:57

Free: 15 MB

Select Sort/Show Refresh Exit

Additional connectors (e.g. for SD memory card and USB interface) are protected by hinged covers.

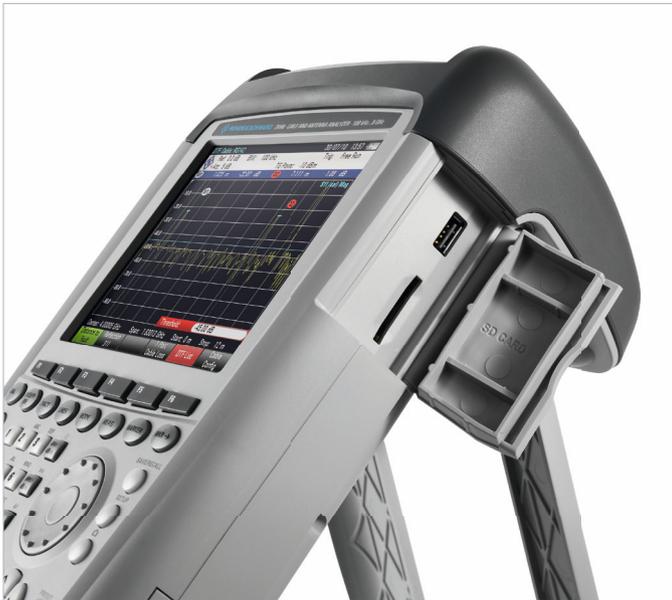

Control elements



The R&S®ZVH with terminating power sensor.



The R&S®ZVH with directional power sensor.



Documentation and remote control

R&S®ZHVView software for documenting measurement results

The R&S®ZHVView software makes it easy to define test sequences, administer instrument settings and document measurement results. The report function, with just a few mouse clicks, combines the individual results of a test sequence into a test report that is saved in .pdf, .html or .rtf format. R&S®ZHVView comes with the R&S®ZVH.

R&S®ZHVView offers users the following advantages:

- Fast data exchange between the R&S®ZVH and a PC via a USB or LAN connection
- Easy processing of measurement results by means of data export in ASCII, Touchstone (*.S1p, *.S2p) or Excel format
- Storage of graphics data in .bmp, .pcx, .png and .wmf format
- Generation of user-defined test sequences (wizard)
- Easy creation of test reports in .pdf, .html and .rtf format
- Printout of all relevant data via Windows PC
- Simple comparison of measurement results
- Subsequent analysis of measurement results by editing markers and limit lines
- Generation of cable data using an integrated cable editor and downloading to the R&S®ZVH for distance-to-fault measurement
- Editor for generating limit lines and channel lists
- Compatible with Windows XP, Vista, Windows 7 and Windows 8


Remote control via LAN or USB

The R&S®ZVH can be remotely controlled via the USB or LAN interface and can therefore be integrated into user-specific programs. The SCPI-compatible remote control commands are activated by the R&S®ZVH-K40 option. The remote display included with the R&S®ZHVView software shows the R&S®ZVH screen in realtime and allows to operate the instrument remotely via USB or LAN for training and presentation purposes


The R&S®ZVH with a laptop.



The R&S®ZHVView software.

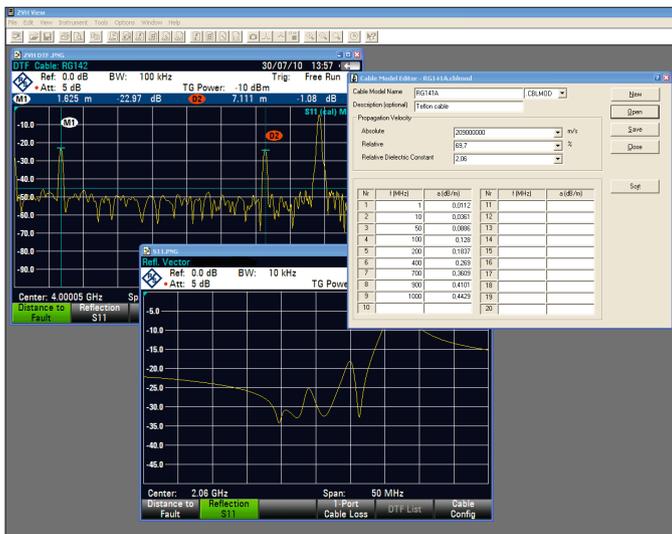

The R&S®ZHVView remote display.

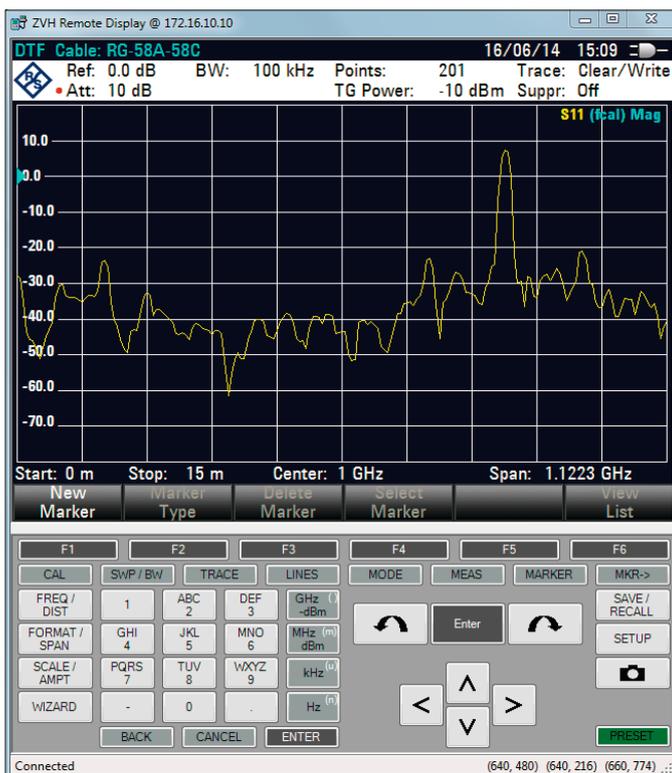

Specifications in brief

Specifications in brief		R&S®ZVH4	R&S®ZVH8
Frequency range		100 kHz to 3.6 GHz	100 kHz to 8 GHz
Standard measurement functions		reflection measurement, distance-to-fault measurement, one-port cable loss measurement	
Output power (port 1, port 2)		0 dBm to -40 dBm (nominal), in 1 dB steps	
Maximum permissible spurious signal level		+17 dBm (nominal)	
Number of points		101, 201, 401, 601, 631, 801, 1001, 1201	
Distance-to-fault (DTF) measurement			
Display modes		return loss (dB), VSWR	
Resolution in meters		(1.58 × velocity factor/span)	
Horizontal display range		3 m to 1500 m	
Reflection measurement			
Directivity	100 kHz to 3 GHz (nominal)	> 43 dB (nominal)	> 43 dB (nominal)
	3 GHz to 3.6 GHz	> 37 dB (nominal)	> 37 dB (nominal)
	3.6 GHz to 6 GHz	–	> 37 dB (nominal)
	6 GHz to 8 GHz	–	> 31 dB (nominal)
Display modes		S11, return loss (dB), VSWR, one-port cable loss	
	vector network analysis (R&S®ZVH-K42)	S11, S22, magnitude, phase, magnitude + phase, Smith chart, VSWR, reflection coefficient, mp, one-port cable loss, electrical length, group delay	
	vector voltmeter (R&S®ZVH-K45)	magnitude + phase, Smith chart	
Transmission measurement (with R&S®ZVH-K39 or R&S®ZVH-K42)			
Dynamic range (S_{21} , S_{12})	100 kHz to 300 kHz	> 50 dB (nominal)	> 50 dB (nominal)
	300 kHz to 2.5 GHz	> 80 dB, typ. 100 dB	> 80 dB, typ. 100 dB
	2.5 GHz to 3.6 GHz	> 70 dB, typ. 90 dB	> 70 dB, typ. 90 dB
	3.6 GHz to 6 GHz	–	> 70 dB, typ. 90 dB
	6 GHz to 8 GHz	–	> 50 dB (nominal)
Display modes	transmission measurement (R&S®ZVH-K39)	S_{21} , magnitude in dB (loss, gain)	
	vector network analysis (R&S®ZVH-K42)	S_{21} , S_{12} , magnitude (loss, gain), phase, magnitude + phase, electrical length, group delay	
	vector voltmeter (R&S®ZVH-K45)	magnitude + phase	
DC voltage supply (DC bias, port 1 and port 2)			
Voltage range	internal voltage supply	+12 V to +32 V, in 1 V steps	
Maximum output power		4 W (battery), 10 W (AC supply)	
Maximum current		500 mA	
Maximum voltage	external voltage supply	50 V	
Maximum current		600 mA	
General data			
Display		6.5" color LCD with VGA resolution	
Battery operating time	R&S®HA-Z204, 4.5 Ah	up to 3 h	
	R&S®HA-Z206, 6.75 Ah	up to 4.5 h	
Dimensions (W × H × D)		194 mm × 300 mm × 69 mm (144 mm) ¹⁾ (7.6 in × 11.8 in × 2.7 in (5.7 in)) ¹⁾	
Weight		< 3 kg (6.6 lb)	

¹⁾ With carrying handle.

For data sheet, see PD 5214.4588.22 and www.rohde-schwarz.com.

Ordering information

Designation	Type	Order No.
Base unit		
Cable and Antenna Analyzer, 100 kHz to 3.6 GHz	R&S®ZVH4	1309.6800.24
Cable and Antenna Analyzer, 100 kHz to 8 GHz	R&S®ZVH8	1309.6800.28
Accessories supplied		
Lithium-ion battery pack (4.5 Ah), USB cable, LAN cable, plug-in power supply, CD ROM with R&S®ZVHView software and documentation, quick start guide		
Software options (usually via software license)		
Spectrum Analysis Application	R&S®ZVH-K1	1309.6823.02
Power Meter Measurement Application with R&S®FSH-Zxx or R&S®NRP-Zxx power sensors (R&S®FSH-Zxx or R&S®NRP-Zxx power sensors required) ¹⁾	R&S®ZVH-K9	1309.6852.02
Channel Power Meter	R&S®ZVH-K19	1304.5987.02
Spectrogram Measurement Application	R&S®ZVH-K14	1309.7007.02
Pulse Measurements with Power Sensor ²⁾	R&S®ZVH-K29	1304.0491.02
Transmission Measurement Application	R&S®ZVH-K39	1309.6830.02
Remote Control via USB or LAN Application	R&S®ZVH-K40	1309.7013.02
Vector Network Analysis Application	R&S®ZVH-K42	1309.6846.02
Vector Voltmeter Measurement Application	R&S®ZVH-K45	1309.6998.02
Accessories		
RF Cable (length: 1 m), N male/N female, for R&S®FSH-K41 option, DC to 8 GHz	R&S®FSH-Z320	1309.6600.00
RF Cable (length: 3 m), N male/N female, for R&S®FSH-K41 option, DC to 8 GHz	R&S®FSH-Z321	1309.6617.00
Combined Open/Short/50 Ω Load Calibration Standard, for calibrating the VSWR and DTF measurements, DC to 3.6 GHz	R&S®FSH-Z29	1300.7510.03
Combined Open/Short/50 Ω Load Calibration Standard, for calibrating the VSWR and DTF measurements, DC to 8 GHz	R&S®FSH-Z28	1300.7810.03
Calibration Kit, N male, 50 Ω, Open/Short/Match/Through combination, 0 Hz to 9 GHz	R&S®ZV-Z170	1317.7683.02
Calibration Kit, N female, 50 Ω, Open/Short/Match/Through combination, 0 Hz to 9 GHz	R&S®ZV-Z170	1317.7683.03
Matching Pad, 50 Ω/75 Ω, bidirectional, 0 Hz to 2.7 GHz, N female/N male, load capacity 2 W, series resistor 25 Ω	R&S®RAZ	0358.5714.02
Matching Pad, 50 Ω/75 Ω, bidirectional, 0 Hz to 2.7 GHz, N female/N male, load capacity 2 W, series resistor 25 Ω	R&S®RAM	0358.5414.02
Matching Pad, 50 Ω/75 Ω, bidirectional, 0 Hz to 1 GHz, BNC female/N male, load capacity 1 W	R&S®FSH-Z38	1300.7740.02
Adapter, N male/BNC female		0118.2812.00
Adapter, N male/N male		0092.6581.00
Adapter, N male/SMA female		4012.5837.00
Adapter, N male/7/16 female		3530.6646.00
Adapter, N male/7/16 male		3530.6630.00
Adapter, N male/FME female		4048.9790.00
Adapter, BNC male/banana female		0017.6742.00
Attenuator, 50 W, 20 dB, 50 Ω, DC to 6 GHz, N female/N male	R&S®RDL50	1035.1700.52
Attenuator, 100 W, 20 dB, 50 Ω, DC to 2 GHz, N female/N male	R&S®RBU100	1073.8495.20
Attenuator, 100 W, 30 dB, 50 Ω, DC to 2 GHz, N female/N male	R&S®RBU100	1073.8495.30
GSM/UMTS/CDMA Antenna, with magnetic mount, 850/900/1800/1900/2100 band, N connector	R&S®TS95A16	1118.6943.16
Lithium-Ion Battery Pack, 4.5 Ah	R&S®HA-Z204	1309.6130.00
Lithium-Ion Battery Pack, 6.75 Ah	R&S®HA-Z206	1309.6146.00
Battery Charger for Lithium-Ion battery pack, 4.5 Ah/6.75 Ah ³⁾	R&S®HA-Z203	1309.6123.00
12 V Car Adapter	R&S®HA-Z202	1309.6117.00
Soft Carrying Bag, (W × H × D: 260 mm × 360 mm × 280 mm; 10.3 in × 14.2 in × 11.0 in)	R&S®HA-Z220	1309.6175.00
Hard Case	R&S®HA-Z221	1309.6181.00
Carrying Holster including chest harness and rain cover	R&S®HA-Z222	1309.6198.00

Designation	Type	Order No.
SD Memory Card, 2 Gbyte	R&S®HA-Z232	1309.6223.00
GPS Receiver	R&S®HA-Z240	1309.6700.03
Spare USB Cable	R&S®HA-Z211	1309.6169.00
Spare LAN Cable	R&S®HA-Z210	1309.6152.00
Spare AC Adapter	R&S®HA-Z201	1309.6100.00
Spare CD ROM with R&S®ZVHView software and documentation	R&S®ZVH-Z45	1309.6946.00
Printed Quick Start Guide for R&S®ZVH, English	R&S®ZVH-Z46	1309.6900.12
Printed Quick Start Guide for R&S®ZVH, German	R&S®ZVH-Z47	1309.6900.11
Power sensors supported by the R&S®ZVH-K9 option (average power measurement)		
Power Sensor, 200 pW to 200 mW, 10 MHz to 8 GHz	R&S®FSH-Z1	1155.4505.02
Power Sensor, 200 pW to 200 mW, 10 MHz to 18 GHz	R&S®FSH-Z18	1165.1909.02
Directional Power Sensor, 30 mW to 300 mW, 25 MHz to 1 GHz	R&S®FSH-Z14	1120.6001.02
Directional Power Sensor, 30 mW to 300 W, 200 MHz to 4 GHz	R&S®FSH-Z44	1165.2305.02
USB Adapter Cable for R&S®FSH-Z1/-Z18, length: 1.8 m	R&S FSH-Z101	1164.6242.02
R&S®FSH-Z129 Adapter Cable for R&S®NRP-Z8x	R&S®FSH-Z129	1304.5887.00
USB Adapter Cable for R&S®FSH-Z14/-Z44, length: 1.8 m	R&S®FSH-Z144	1145.5909.02
Universal Power Sensor ¹⁾ , 200 pW to 200 mW, 10 MHz to 8 GHz	R&S®NRP-Z11	1138.3004.02
Universal Power Sensor ¹⁾ , 200 pW to 200 mW, 10 MHz to 18 GHz	R&S®NRP-Z21	1137.6000.02
Universal Power Sensor ¹⁾ , 2 nW to 2 W, 10 MHz to 18 GHz	R&S®NRP-Z22	1137.7506.02
Universal Power Sensor ¹⁾ , 20 nW to 15 W, 10 MHz to 18 GHz	R&S®NRP-Z23	1137.8002.02
Universal Power Sensor ¹⁾ , 60 nW to 30 W, 10 MHz to 18 GHz	R&S®NRP-Z24	1137.8502.02
Universal Power Sensor ¹⁾ , 200 pW to 200 mW, 10 MHz to 33 GHz	R&S®NRP-Z31	1169.2400.02
Wideband Power Sensor ¹⁾ , 1 nW to 100 mW, 50 MHz to 18 GHz	R&S®NRP-Z81	1137.9009.02
Thermal Power Sensor ¹⁾ , 1 µW to 100 mW, DC to 18 GHz	R&S®NRP-Z51	1138.0005.02
Thermal Power Sensor ¹⁾ , 1 µW to 100 mW, DC to 40 GHz	R&S®NRP-Z55	1138.2008.02
Thermal Power Sensor ¹⁾ , 300 nW to 100 mW, DC to 50 GHz	R&S®NRP-Z56	1171.8201.02
Thermal Power Sensor ¹⁾ , 300 nW to 100 mW, DC to 67 GHz	R&S®NRP-Z57	1171.8401.02
Average Power Sensor ¹⁾ , 200 pW to 200 mW, 9 MHz to 6 GHz	R&S®NRP-Z91	1168.8004.02
Average Power Sensor ¹⁾ , 2 nW to 2 mW, 9 kHz to 6 GHz	R&S®NRP-Z92	1171.7005.02
USB Adapter (passive) for connecting R&S®NRP-Zxx power sensors to the R&S®ZVH	R&S®NRP-Z4	1146.8001.02

¹⁾ For the R&S®NRP-Zxx power sensors, the R&S®NRP-Z4 USB adapter is also required.

²⁾ Requires R&S®FSH-Z129 for R&S®ZVH4 with serial numbers < 115331 and R&S®ZVH8 with serial numbers < 115239.

³⁾ Battery charger is required to charge the battery pack outside the R&S®ZVH.

Service options		
Extended Warranty, one year	R&S®WE1	Please contact your local Rohde&Schwarz sales office.
Extended Warranty, two years	R&S®WE2	
Extended Warranty, three years	R&S®WE3	
Extended Warranty, four years	R&S®WE4	
Extended Warranty with Calibration Coverage, one year	R&S®CW1	
Extended Warranty with Calibration Coverage, two years	R&S®CW2	
Extended Warranty with Calibration Coverage, three years	R&S®CW3	
Extended Warranty with Calibration Coverage, four years	R&S®CW4	

Your local Rohde&Schwarz expert will help you to determine the optimum solution for your requirements.

To find your nearest Rohde&Schwarz representative, visit www.sales.rohde-schwarz.com

Service that adds value

- | Worldwide
- | Local and personalized
- | Customized and flexible
- | Uncompromising quality
- | Long-term dependability

About Rohde & Schwarz

The Rohde & Schwarz electronics group is a leading supplier of solutions in the fields of test and measurement, broadcast and media, secure communications, cyber-security, and radiomonitoring and radiolocation. Founded more than 80 years ago, this independent global company has an extensive sales network and is present in more than 70 countries. The company is headquartered in Munich, Germany.

Sustainable product design

- | Environmental compatibility and eco-footprint
- | Energy efficiency and low emissions
- | Longevity and optimized total cost of ownership

Certified Quality Management

ISO 9001

Certified Environmental Management

ISO 14001

Rohde & Schwarz GmbH & Co. KG

www.rohde-schwarz.com

Regional contact

- | Europe, Africa, Middle East | +49 89 4129 12345
customersupport@rohde-schwarz.com
- | North America | 1 888 TEST RSA (1 888 837 87 72)
customer.support@rsa.rohde-schwarz.com
- | Latin America | +1 410 910 79 88
customersupport.la@rohde-schwarz.com
- | Asia Pacific | +65 65 13 04 88
customersupport.asia@rohde-schwarz.com
- | China | +86 800 810 82 28 | +86 400 650 58 96
customersupport.china@rohde-schwarz.com

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG

Trade names are trademarks of the owners

PD 5214.4588.12 | Version 06.00 | March 2015 (as)

R&S®ZVH Cable and Antenna Analyzer

Data without tolerance limits is not binding | Subject to change

© 2010 - 2015 Rohde & Schwarz GmbH & Co. KG | 81671 Munich, Germany



5214458812